 
 


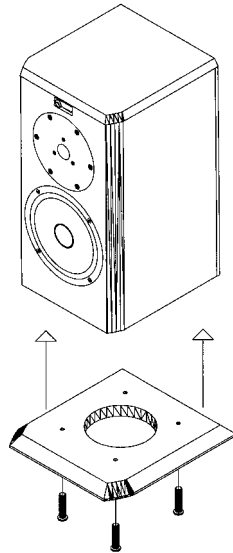

Installation Instructions for mounting Nuance Main Speaker(s) onto a Nuance Baby Sub 1.


TIP: It may be helpful to have an extra person assist in completing this procedure.

1. Carefully turn the Nuance Main speaker upside down on a carpeted floor or other soft surface. Unscrew the 4 screws and set them aside for later use. Lift off the base. Wrap it and store the base(s) in a secure place for possible future use.
2. Unpack the Nuance Baby Sub and store the packing materials and carton in a safe place for any future move or shipment required. Lift off the top of the Baby Sub by pulling with your hands at the corners or edges of the top. On a soft carpeted floor, carefully place the Baby Sub speaker on its side with one of the bottom edges approximately where it is to be permanently positioned. Screw the (4) metal conicals into threaded inserts in the base of the Baby Sub. Connect the Nuance Livewire™ speaker wire (or other brand) into the bottom terminal of the Baby Sub, making sure to keep the positive red terminal connected to the positive red wire. (See the enclosed subwoofer owners manual for connection instructions.)

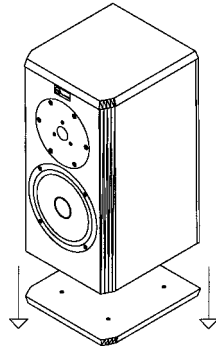

Carefully raise the Baby Sub to its upright position.

3. Place the Baby Sub top (removed in step 2) on to the bottom of the Nuance Main Speaker with the (4) recessed holes facing out. Insert the (4) screws removed in Step 1 to line up the top to the bottom of the Nuance main speaker and screw them loosely in. Centre the top onto the speaker so that each speaker side is the same distance from the edge. Now tight the four screws firmly. Do not overtighten.
4. Lift the Nuance Main speaker on top of the Baby Sub with the side edge of the Main speaker's base on an angle of approximately 45 degrees to allow you to connect the 10" speaker connecting cable (provided) from the Baby Sub to the Main speaker. Be sure to keep the positive red terminal connected to the positive red wire. Complete the installation by lowering down the Nuance Main speaker to the Baby Sub. Make sure the main speaker is centred by placing it onto the (4) locating pins. Press down on the top of the Main speaker to insure the Velcro™ strips lock together.
5. ***When moving the combined unit, be sure to pickup the Baby Sub using the bottom enclosure and lift straight up.***

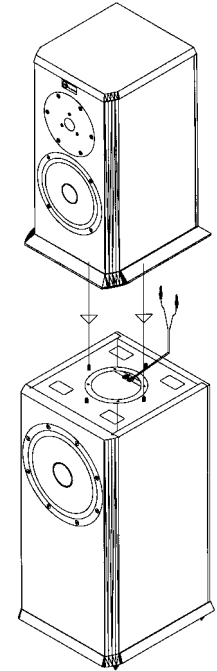

NUANCE AUDIO CORPORATION,
220 TORBAY ROAD., MARKHAM, ONTARIO CANADA L3R 2P3
TEL (905) 305-8438 FAX: (905) 305-8436