



IMPORTANT - Read these instructions completely before installing the GRAND CEN S PRO Top and Base.

Congratulations on your purchase of this Nuance Grand Series speaker. We are very proud of this attractively styled and finished enclosure. In order to maintain a perfect finish, we have shipped them to you in special packaging designed to keep the surfaces free from any pressure of the packaging to ensure no smudges or scratches in shipment. Please follow these instructions to avoid marking your top or base.

1. Unpacking the top and base.

Remove the four foam corner pads and lift out the inner carton. Place it on the floor with the side that has the most staples down. With scissors or a knife, carefully slit open the tape along the sides of the sleeves between the top and bottom covers. Lift up the cardboard tray and place it carefully on a soft carpeted surface with the cardboard side up so that the (4) screws and washers are visible. Remove the screws. Lift off the cardboard cover.

2. Installing the Base.

Please note that the base is the item with (12) holes which go through both sides, eight of which contain metal inserts. On a soft carpeted surface, carefully turn your Nuance GRAND CEN S PRO speaker upside down. Take (2) of the 1" screws which you have removed in step 1 above, and screw (3 or 4 turns) part way into the base on opposite, diagonal corners. *(These screws allow you to grip the base without touching it.)* Using these screws, lift up the base and place on the speaker. Line up the (4) holes in the base with those in the bottom of the speaker cabinet. Fasten the base to the cabinet using 4 of the 1" screws provided *(in the polybag)*. Then select the desired feet and screw them into the (4) inserts located near the corners. We have provided *(in the polybag)* (2) 1" adjustable feet, and (2) 1/2" hard rubber feet, and (2) 1/4" nuts for locking the feet in place. Alternatively, you can use the plastic bumpon pads which are self-adhesive and can be fastened to the bottom of the base without need of any other feet. Finally, we have provided (4) mounting holes with inserts for use with the Nuance BR-1 bracket for wall-mounting.

3. Installing the Top.

Carefully turn your speaker over and place it on your choice of feet ready for installation of the Top. With clean hands, pick up the top from the floor and place carefully on the speaker so that the 4 dowel pins are inserted into the rubber receptacles. Press the Top down firmly to the cabinet *(pins)*.

***Note: To clean your Top and Base, only use cheesecloth
or similar lint-free soft cloth and rub lightly. If they develop scratches,
you can remove the scratches by polishing the surface with a fine
furniture-grade rubbing compound and cheesecloth.***