



IMPORTANT - Read these instructions completely before installing the G-3 & G3.5 SERIES Top & Base.

Congratulations on your purchase of Nuance Grand Series speakers. We are very proud of these attractively styled and finished enclosures. In order to maintain a perfect finish, we have shipped them to you in special packaging designed to keep the surfaces free from any pressure of the packaging to ensure no smudges or scratches in shipment. You must follow these instructions to avoid marking your tops or bases.

1. Unpacking the tops and bases.

Remove the four foam corner pads and lift out the inner carton. Place it on the floor with the side that has the most staples down. With scissors or a knife, carefully slit open the tape along the sides of the sleeves between the top and bottom covers. Lift up the cardboard tray (which contains a top and base) and place carefully on a soft carpeted surface with the cardboard side up so that the 6 screws (8 G3.5) and washers are visible. Remove the 6 screws (8 G3.5). Lift off the cardboard cover.

2. Installing the Base.

Please note that the base is the larger of the two above pieces, with a large hole in its centre. On a soft carpeted surface, carefully turn your Nuance Grand speaker upside down so that the top of the speaker is facing down with the logo near the floor facing you. Take (2) of the 1" screws which you have removed in step 1 above, and screw (3 or 4 turns) part way into the base on opposite, diagonal corners. (These screws allow you to grip the base without touching it.) Using these screws, lift up the base and place on the speaker with the model nameplate located towards the rear (back) of the speaker. Line up the (4) holes in the base with those in the bottom of the speaker cabinet. Fasten the base to the cabinet using 4 of the 2" screws provided (in the polybag). Then take 4 of the conicals from the polybag, place a lockwasher on its thread and tighten lightly to the base bottom using a 3/4" or adjustable wrench.

3. Installing the Top.

Carefully turn your Nuance Grand speaker over and place it on the conicals ready for installation of the Top. With clean hands, pick up the top from the floor and place carefully on the speaker so that the 4 dowel pins are inserted into the rubber receptacles. Press the Top down firmly to the cabinet (pins).

4. Installing the next Top and Base.

Take the remaining cover containing the other Top and Base and turn it over carefully on a soft carpeted surface with the cardboard side up so that the 6 screws (8 G3.5) and washers are visible. Remove the 6 screws (8 G3.5). Lift off the cardboard cover. **Repeat Steps 2. and 3.**

Note: To clean your Tops and Bases, only use lint-free cloth such as cheesecloth and rub lightly. If they develop scratches, you can remove the scratches by polishing the surface with a fine furniture-grade rubbing compound and cheesecloth, or a top-quality car wax.