




Speaker Stand Assembly Instructions


for Nuance Stand models T3, T3S, T4 and T6

Step 1

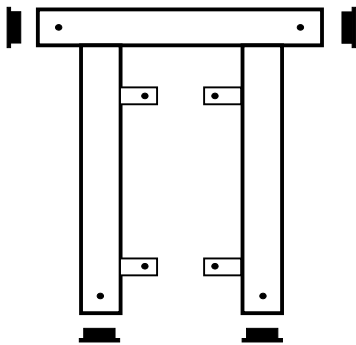


Unpack the speaker stand and place upside down on a carpeted floor or other soft surface. Take a plastic end cap from the carton and insert into each end of the speaker stand. If necessary, use a hammer with a block of wood, to gently tap the cap into place. After it is fully inserted, carefully trim off any plastic swirls around the edge with a knife.

Step 3

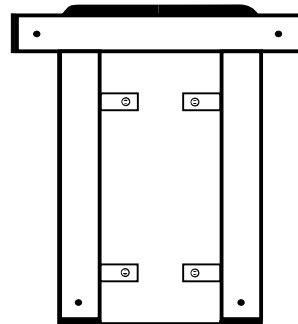


Position the speaker stand on top of the speaker so that the widest part of the frame is closest to the front of the speaker cabinet. Insert the metal screws provided into each of the holes and loosely tighten by hand. Use a screwdriver to tighten each screw further until all screws are firmly in place. Do not overtighten.

Step 2

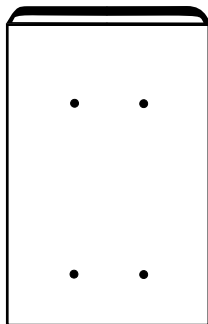

Turn the speaker cabinet upside down on a soft cloth or on a carpeted floor so that the stand insert holes on the bottom of the speaker are facing up.

Step 4

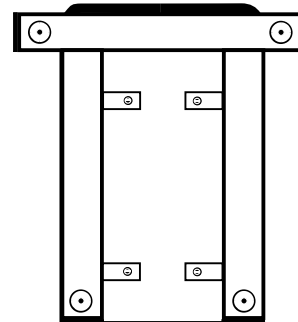

Place 1 flat lock washer under each Conical Support™ and tighten each one with a 3/4" wrench until the lock washer has fully seated. Do not overtighten.

Each carton includes:

- 2 Frame Assemblies
- 8 Plastic end caps
- 1 Instruction sheet
- 1 Polybag containing:
 - 8 1/4x20 1" screws
 - 8 Conical Supports™
 - 8 Flat lockwashers

Please note that the Conical Supports™ are sharp and they could scratch or dent the floor.

If you would prefer plastic glides, they are available at no charge to Nuance stand customers. Please contact your Nuance dealer or Nuance directly for help at (905) 513-6600.